HOME
DECORATORS
COLLECTION

INV# 23110

SK18096 PAYTON STORAGE LOCKER 72"Hx47"Wx18"D

ASSEMBLY INSTRUCTIONS

Made In China

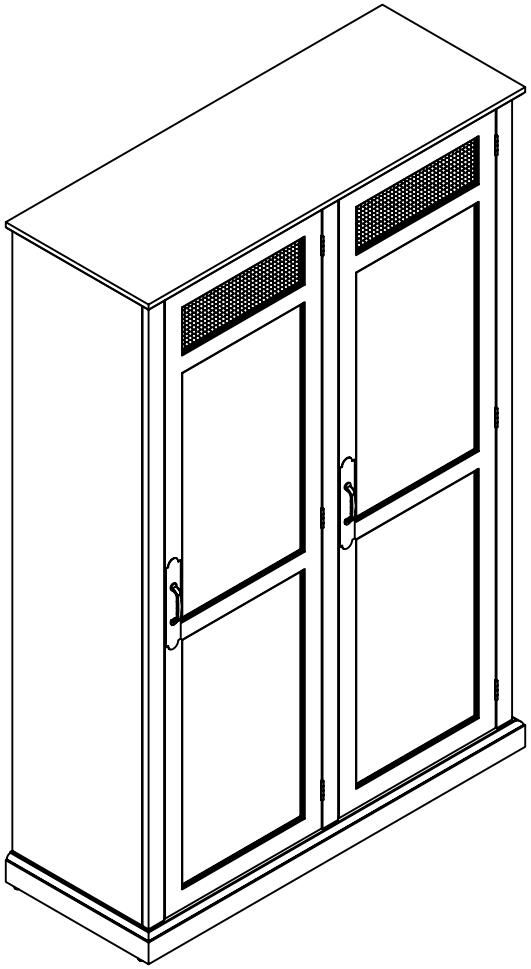

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, please contact our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 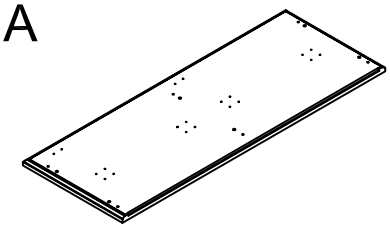 TOP PANEL-1PC	B 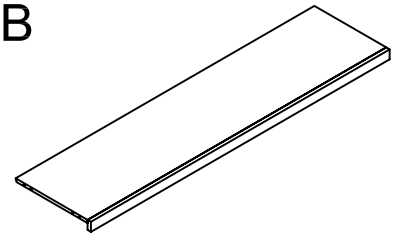 LEFT SIDE PANEL-1PC	C 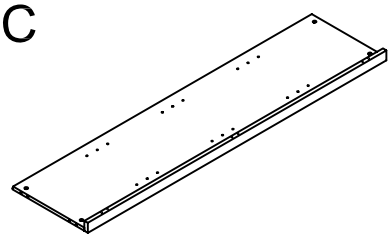 RIGHT SIDE PANEL-1PC
D 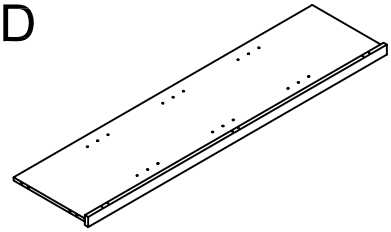 MIDDLE PANEL-1PC	E 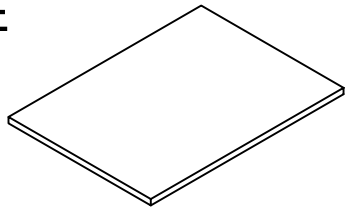 ADJUSTABLE SHELF-6PCS	F 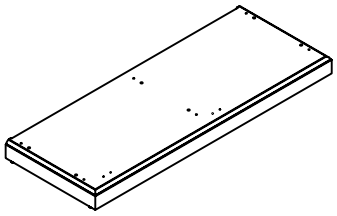 BOTTOM PANEL-1PC
G 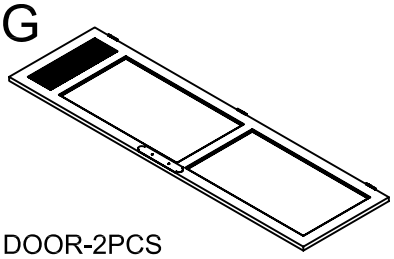 DOOR-2PCS	H 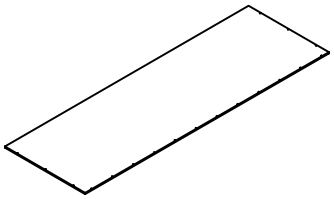 BACK PANEL-2PCS	

a WOOD DOWEL-12PCS	b  CAM LOCK BOLT-12PCS	c CAM LOCK-12PCS
d PLASTIC COVER-12PCS	e 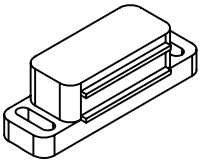 MAGNET-4PCS	f ROUND HEAD SCREW-49PCS
g  METAL PLATE-7PCS	h 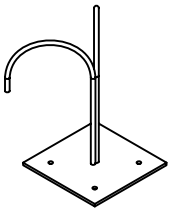 POTHOOK-4PCS	i SHELF PIN-24PCS
j FLAT HEAD SCREW-28PCS	k  HANDLE-2PCS	l HANDLE BOLT-4PCS
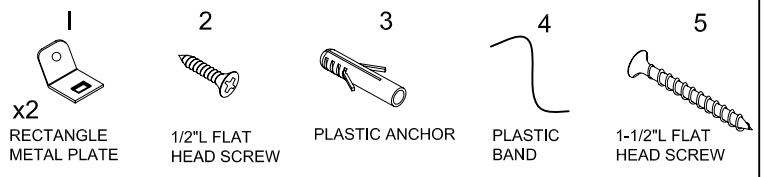 ANTI-TIPPING HARDWARE PACKAGE		

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

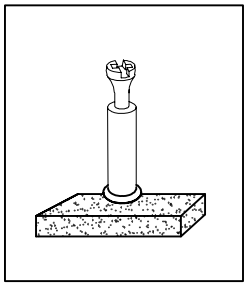

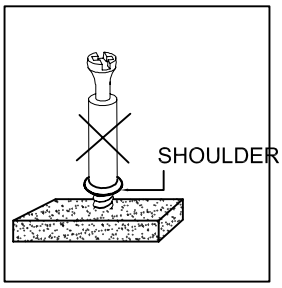

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

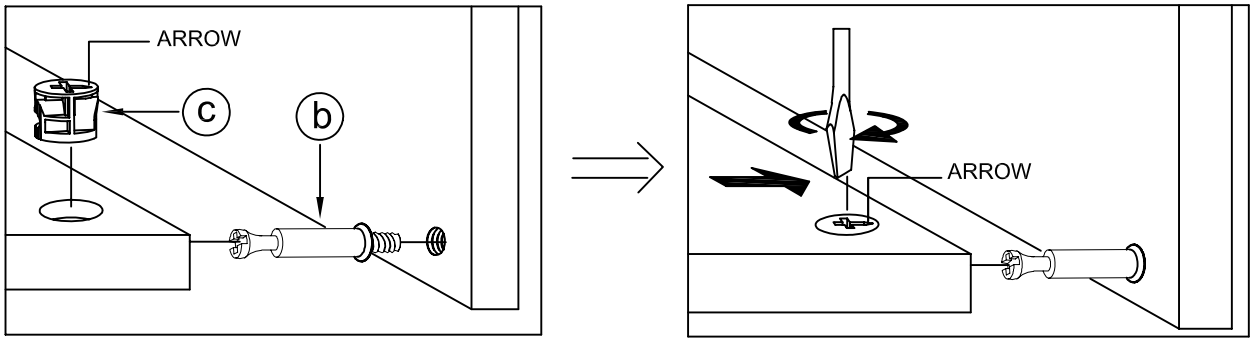

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

FIG 1

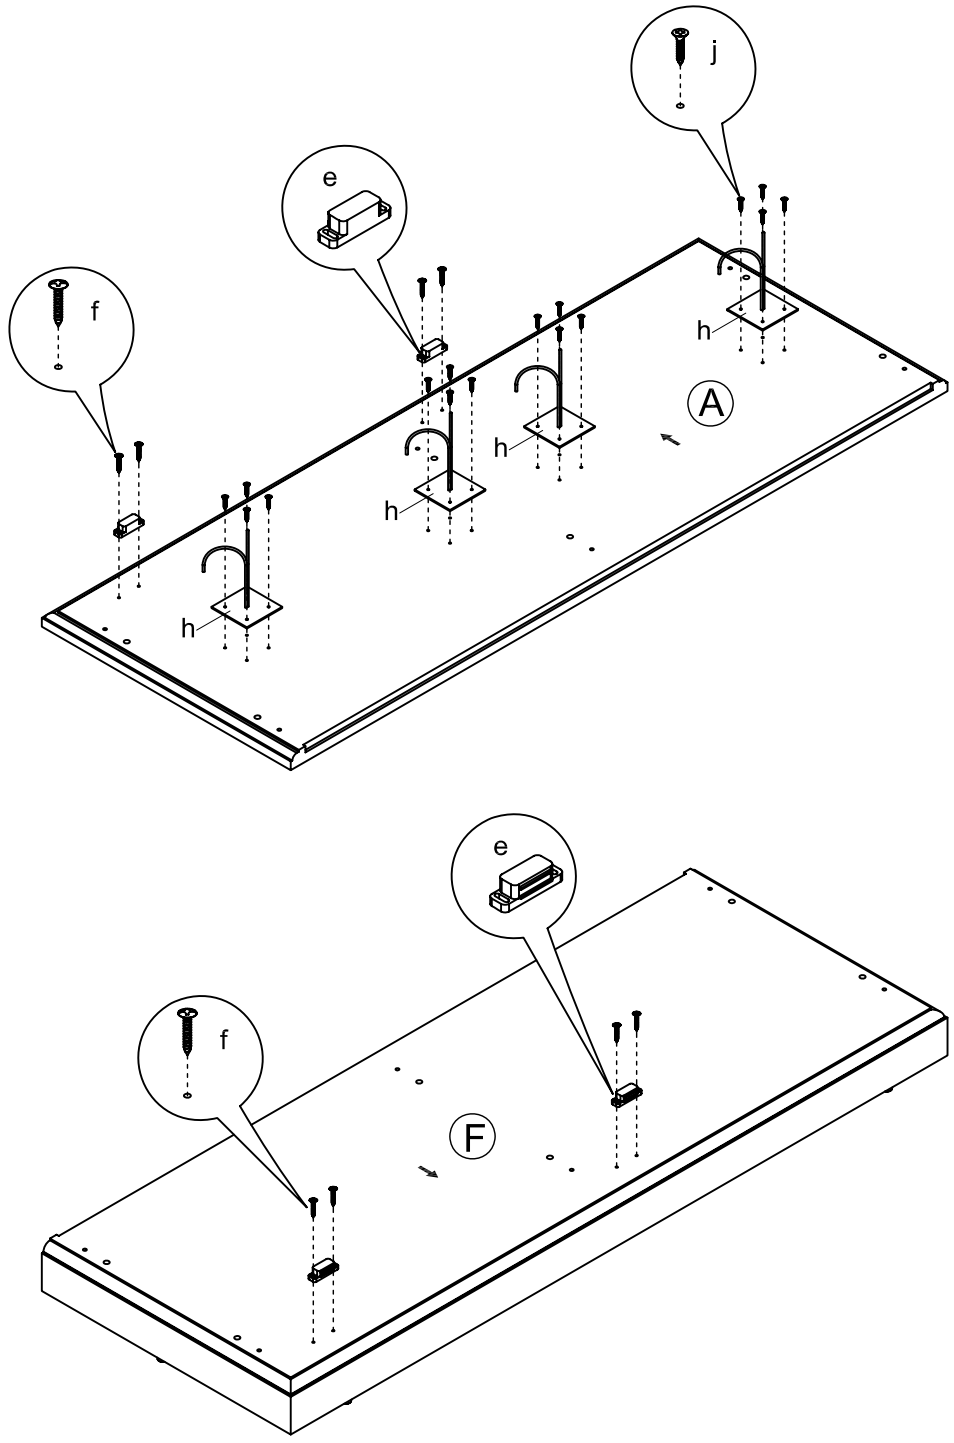

- ATTACH THE MAGNET (e) TO THE TOP PANEL (A) AND THE BOTTOM PANEL (F) BY USING THE 5/8" ROUND HEAD SCREW (f).
- ATTACH THE POTHOOK (h) TO THE TOP PANEL (A) BY USING THE FLAT HEAD SCREW (j).

FIG 2

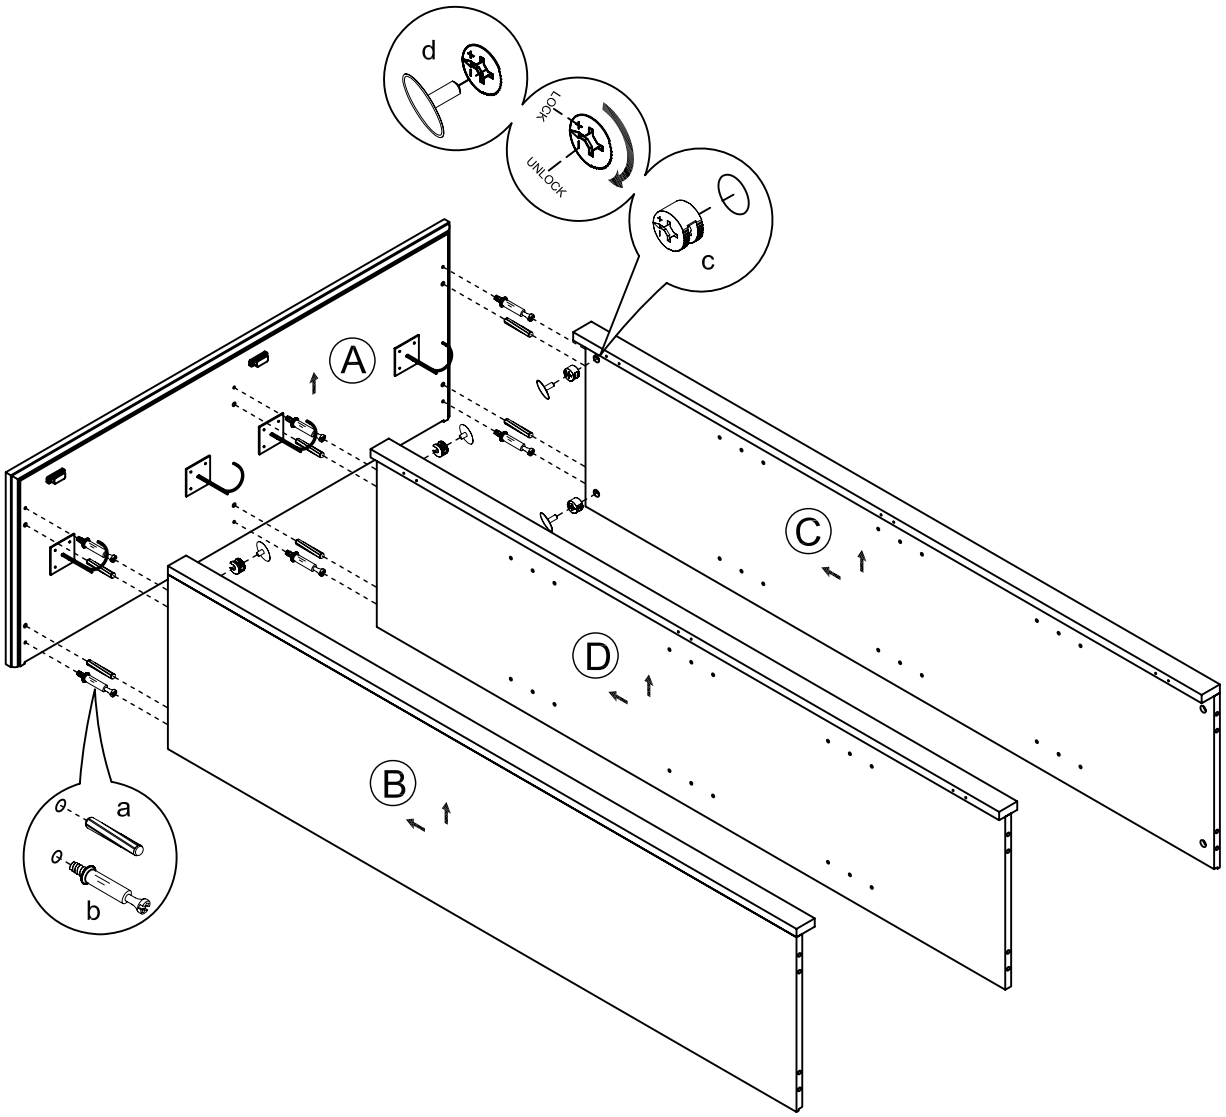

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (A).
- JOIN THE TOP PANEL (A) TO THE LEFT SIDE PANEL (B) THE RIGHT SIDE PANEL (C) AND THE MIDDEL PANEL (D) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (d).

FIG 3

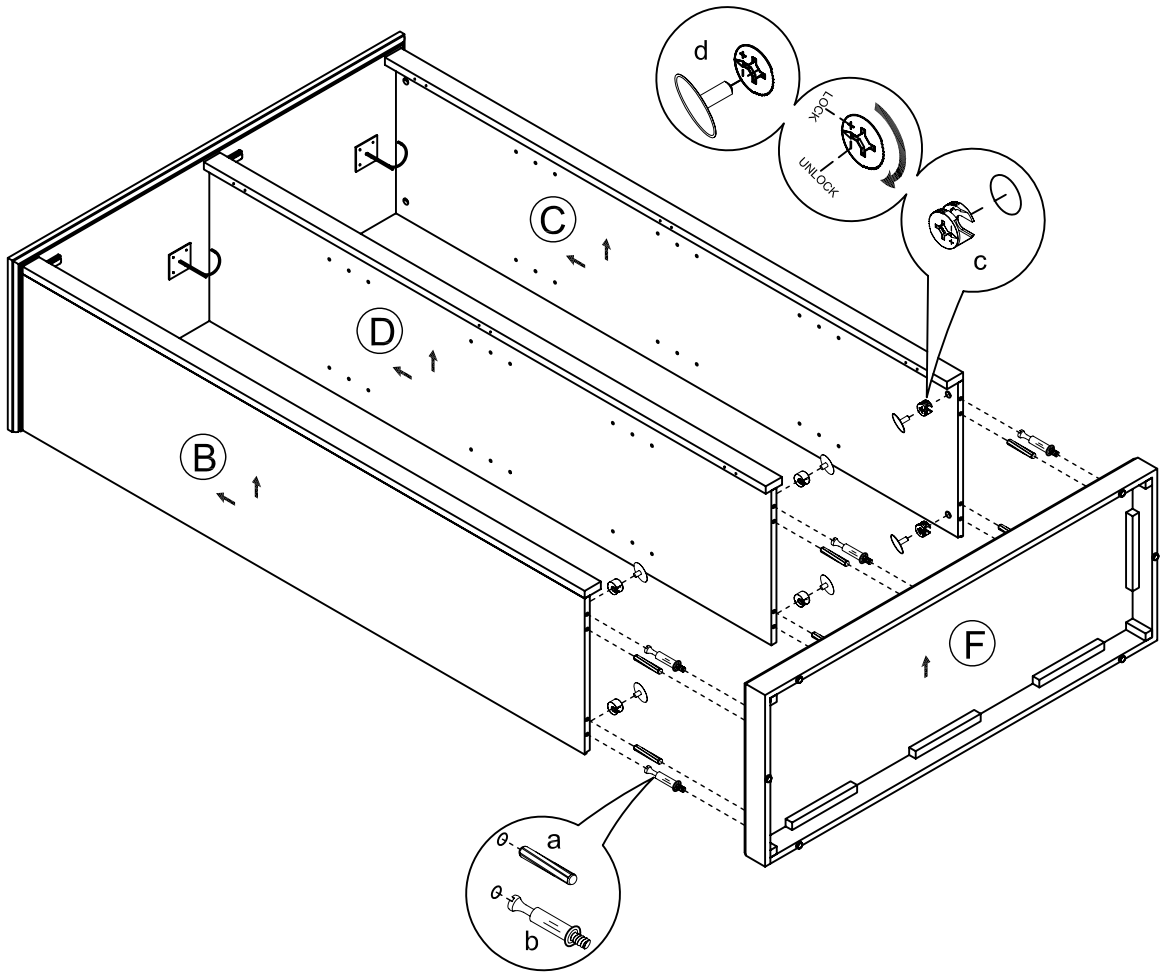

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE BOTTOM PANEL (F).
- JOIN THE BOTTOM PANEL (F) TO THE LEFT SIDE PANEL (B) THE RIGHT SIDE PANEL (C) AND THE MIDDEL PANEL (D) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (d).

FIG 4

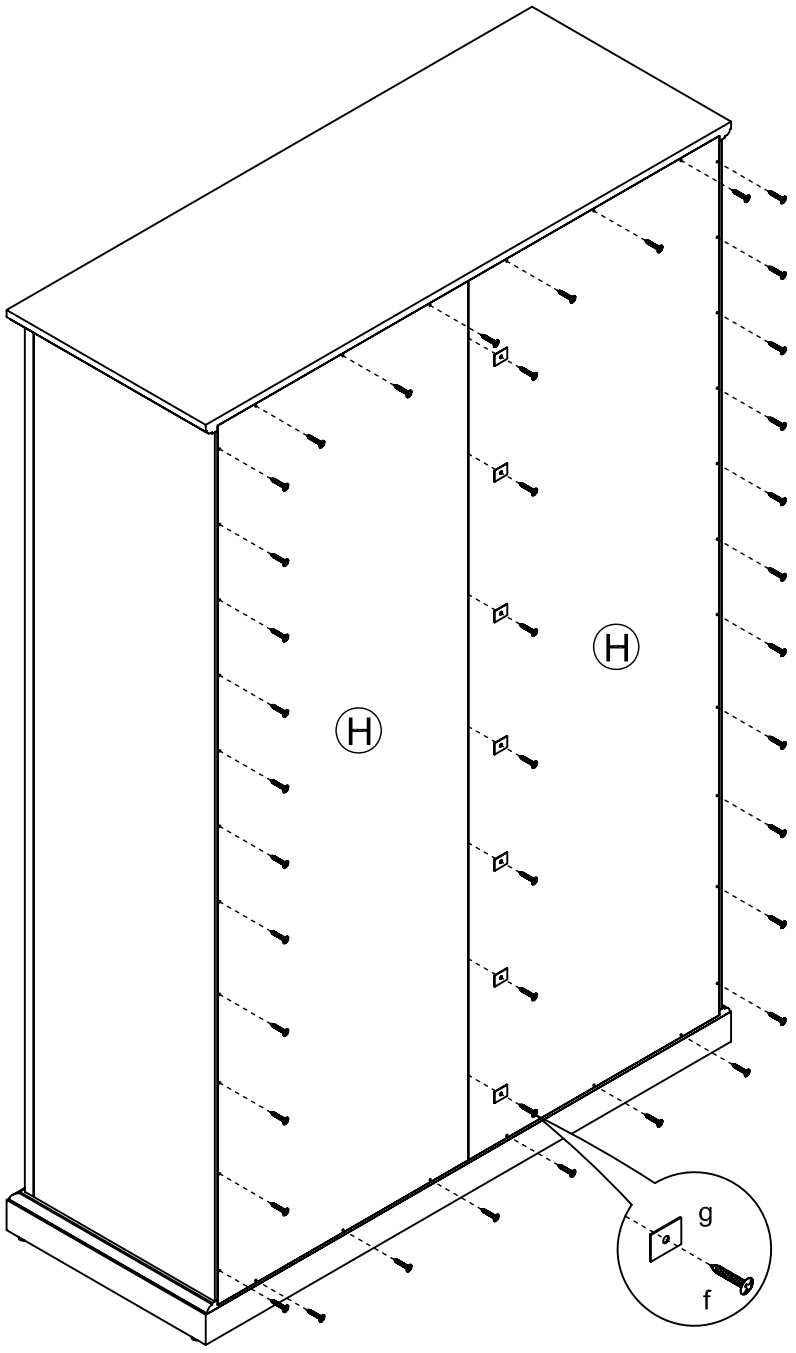

- TIGHTEN THE BACK PANEL (H)
  BY USING THE ROUND HEAD SCREW (f) AND THE METAL PLATE (g).

FIG 5

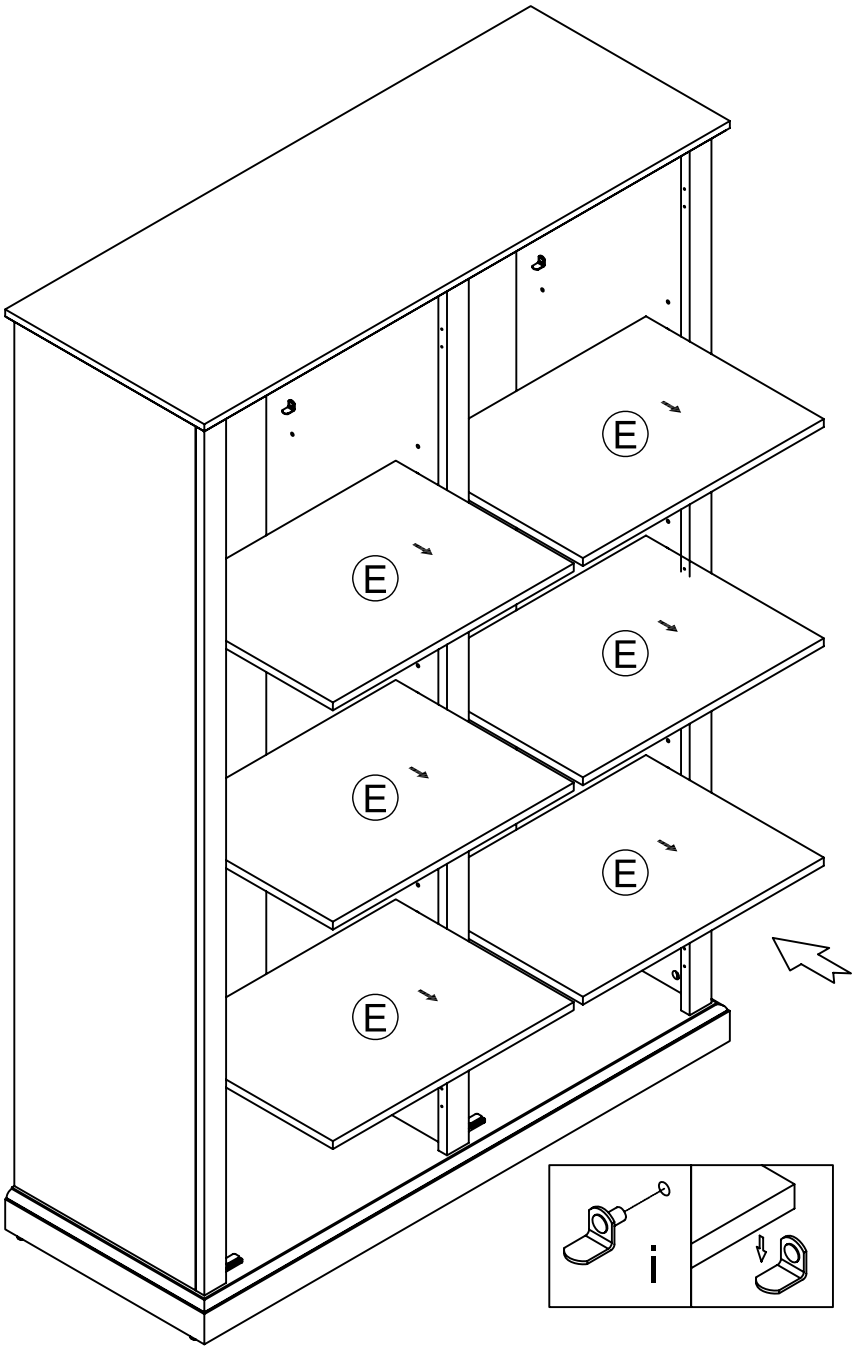

- INSERT THE SHELF PIN (i) IN THE DESIRED POSITION AND THEN PLACE THE ADJUSTABLE SHELF (E) ON THE PINS.

FIG 6

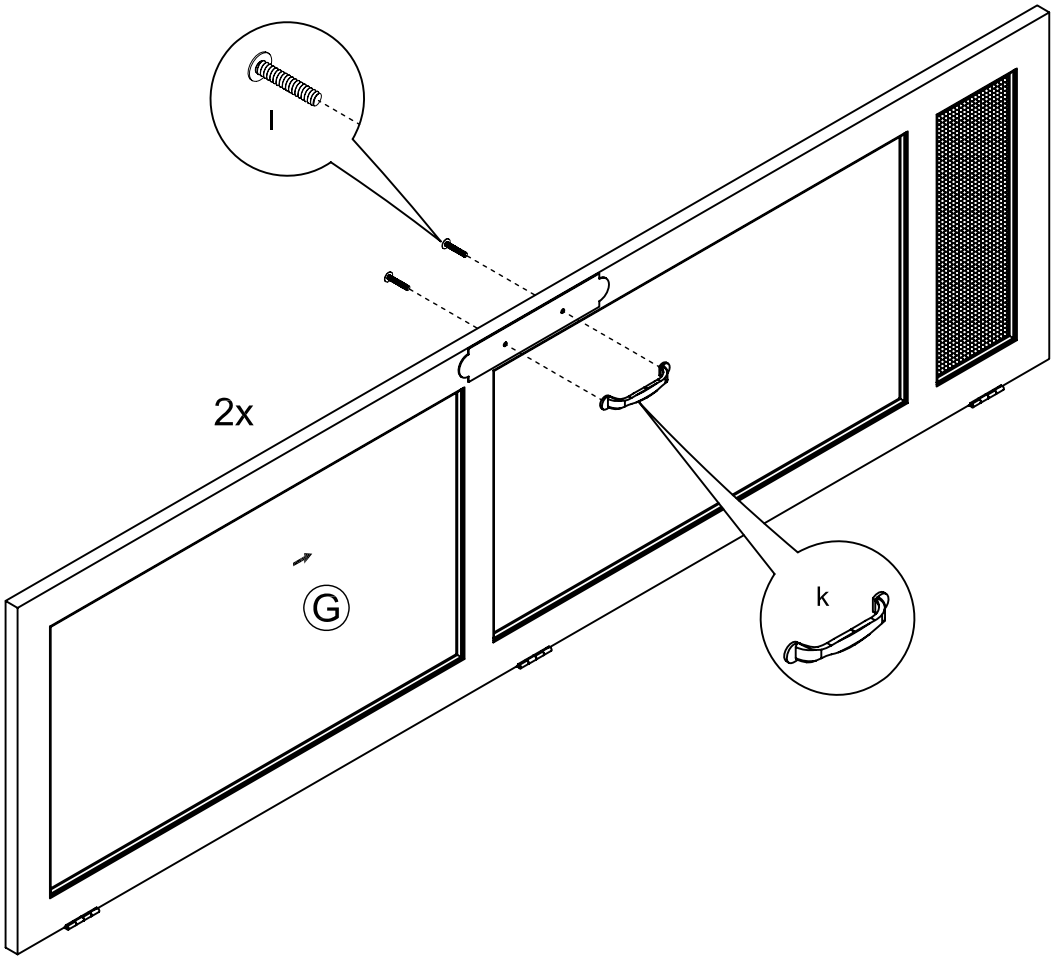

- TIGHTEN THE HANDLE (k) ONTO THE DOOR (G) BY USING THE HANDLE BOLT (I).

FIG 7

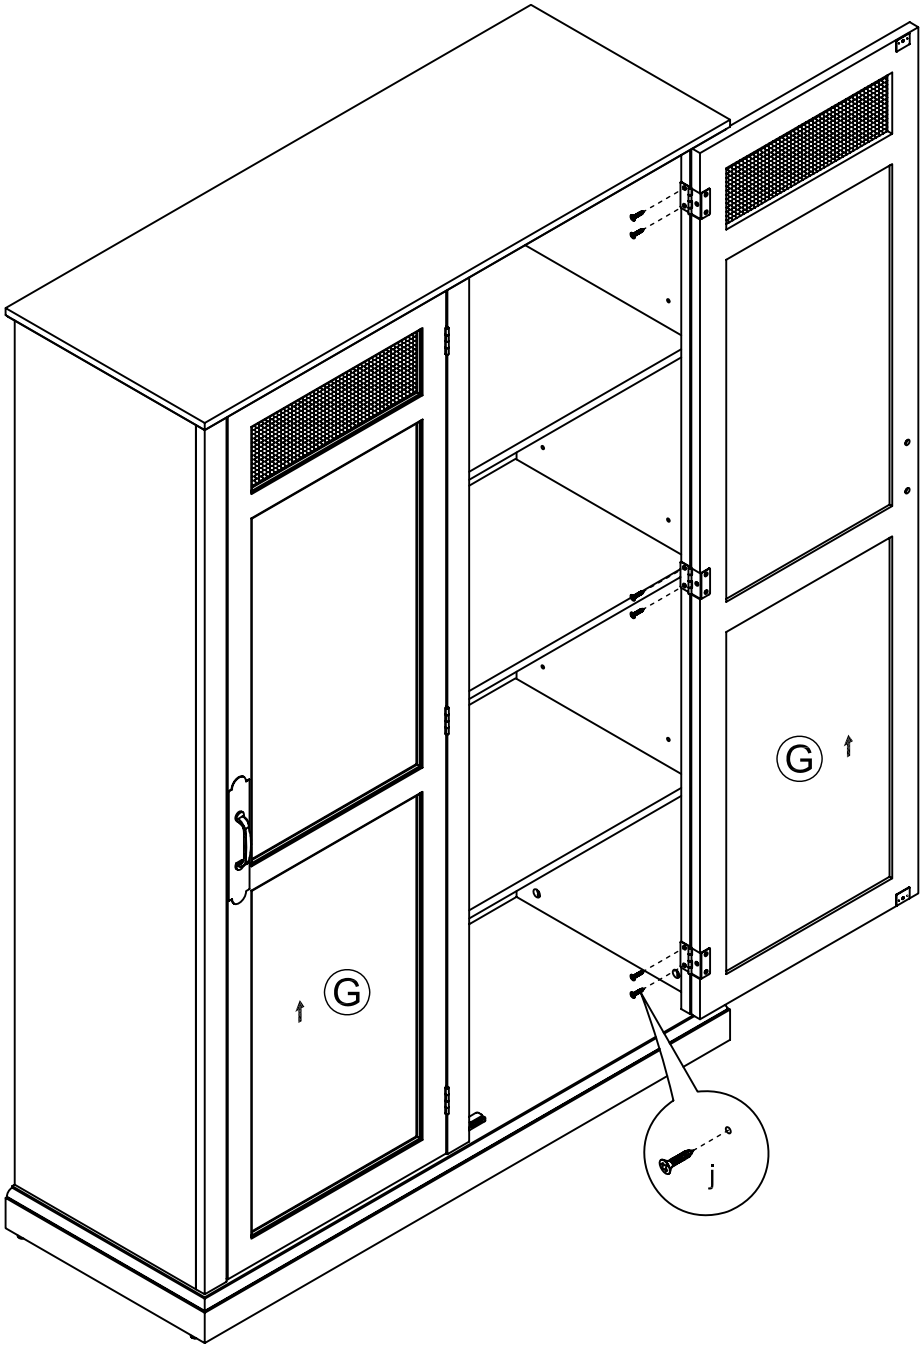

● ATTACH THE DOOR (G) TO THE ASSEMBLED PART BY USING THE FLAT HEAD SCREW (j).

FIG 8

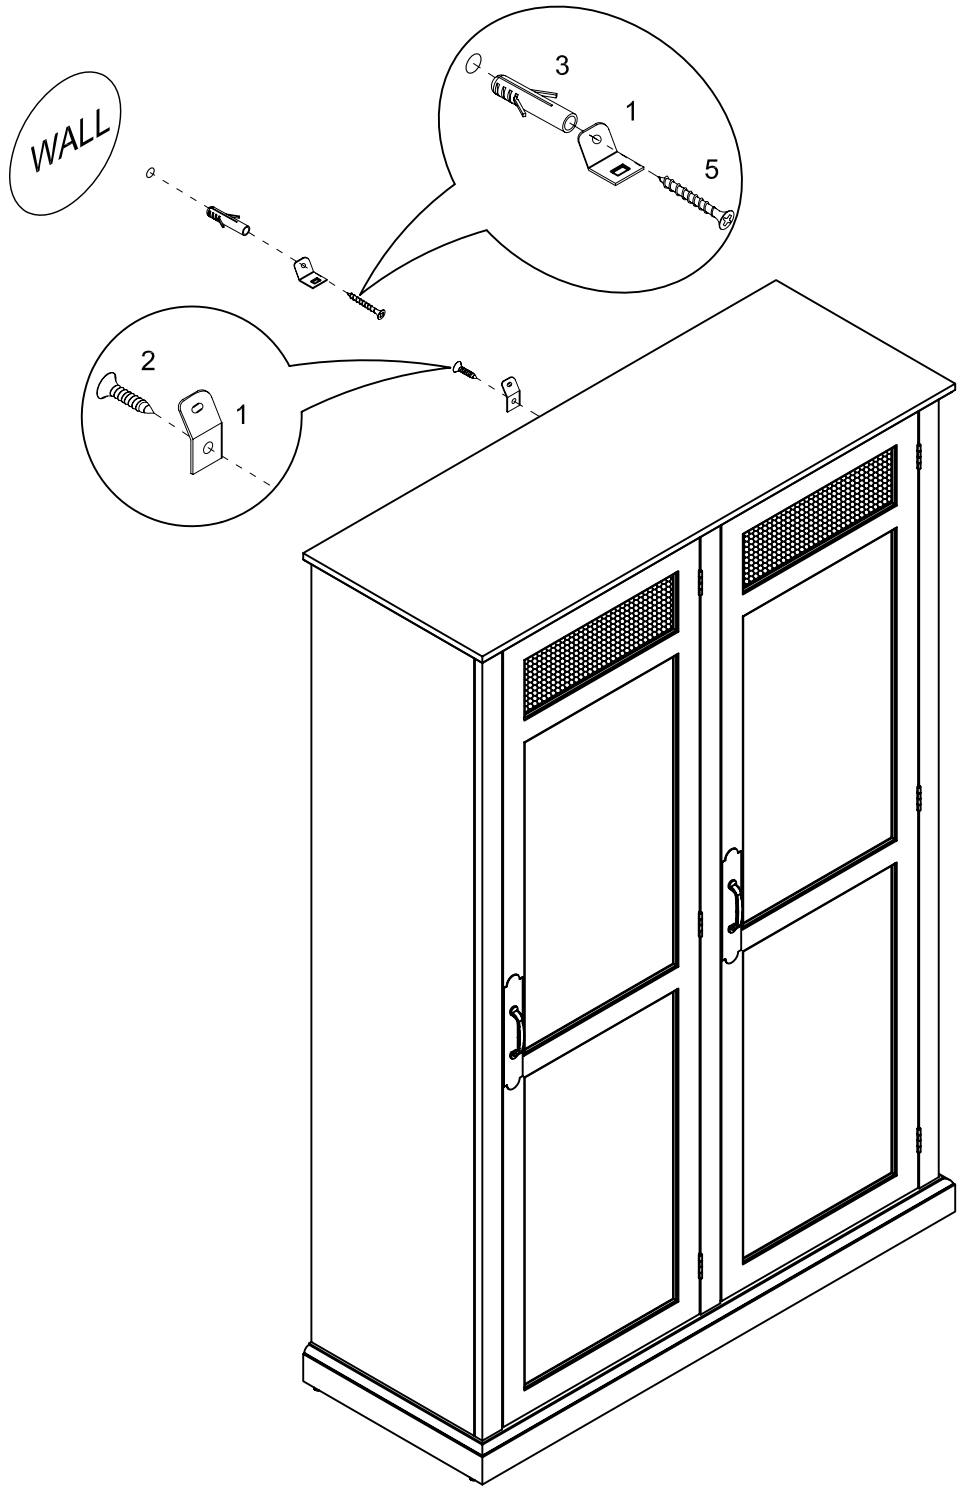

- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE REAR OF THE TOP PANEL (A) BY USING 1/2" FLAT HEAD SCREW (2).
- PLACE THE ASSEMBLED STORAGE LOCKER AT THE DESIRED POSITION. MARK THE INSERTION POINTS FOR THE PLASTIC ANCHOR (3).
- USING THE PROPER HARDWARE FOR YOUR WALL TYPE AND DRILL 1/4" HOLES INTO THE WALL.
- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE PLASTIC ANCHOR (3) BY USING THE 1-1/2" FLAT HEAD SCREW (5).

FIG 9

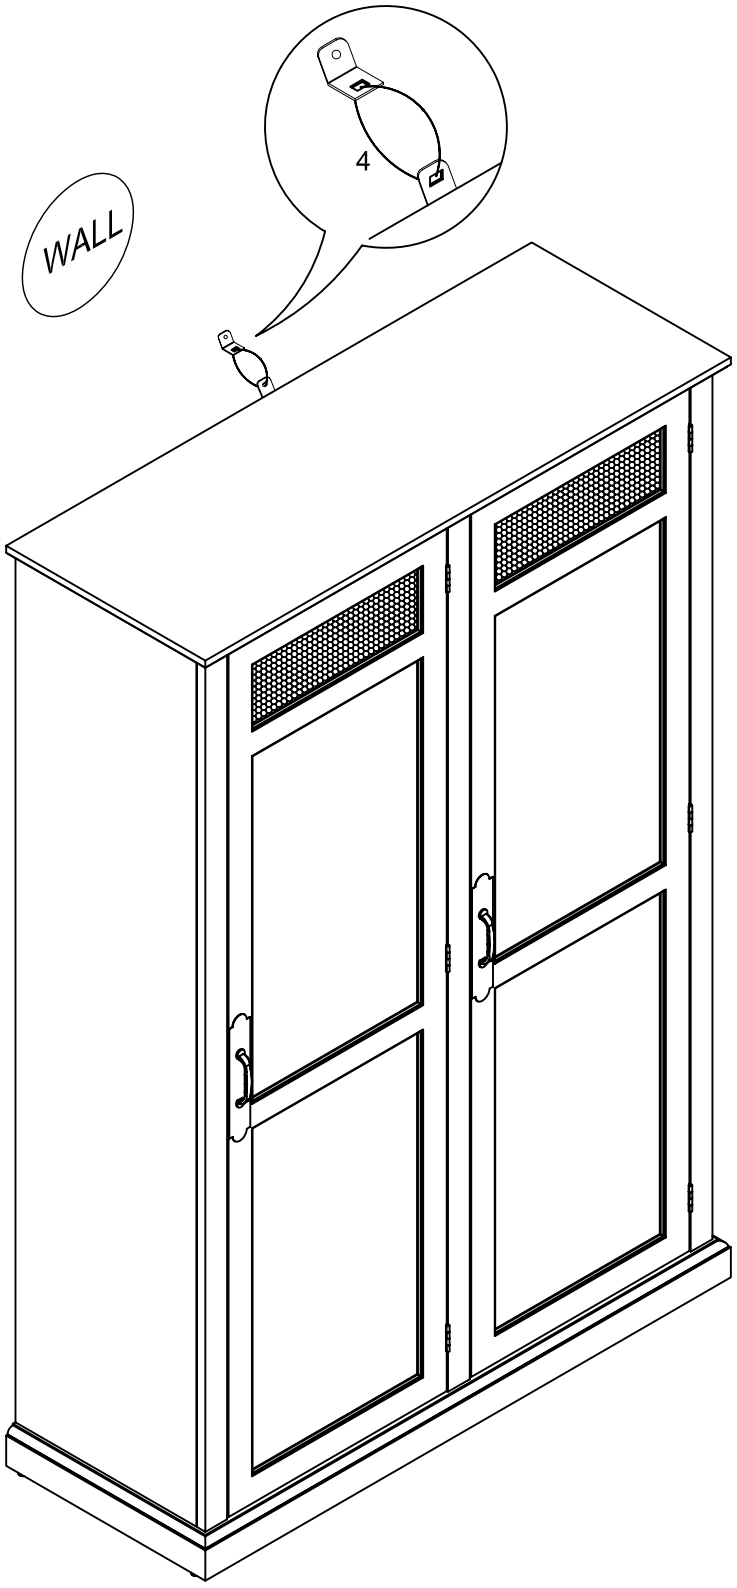

● USING THE PLASTIC BAND (4) CONNECT TWO RECTANGLE METAL PLATES (1).